

Digital-Talking Book Player



LIBRARY OF CONGRESS


National Library Service
for the Blind and
Physically Handicapped

Important Safety Instructions

1. Read these instructions.
 2. Keep these instructions.
 3. Heed all warnings.
 4. Follow all instructions.
 5. Do not use this apparatus near water.
 6. Clean only with dry cloth.
 7. Install in accordance with the manufacturer's instructions.
 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
 9. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 10. Only use attachments/accessories specified by the manufacturer.
 11. Unplug this apparatus during lightning storms or when unused for long periods of time.
 12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
-
- ❖ Do not expose the battery pack to excessive heat such as sunshine, fire or the like.
 - ❖ The mains plug is used as a disconnect device. The mains plug shall remain readily operable.
 - ❖ The player is not designed to be used inside a box or mounted to a rack.
 - ❖ The nameplate label is found on the underside of the player.

WARNING

To reduce the risk of fire or electrical shock, do not expose this apparatus to rain or moisture.

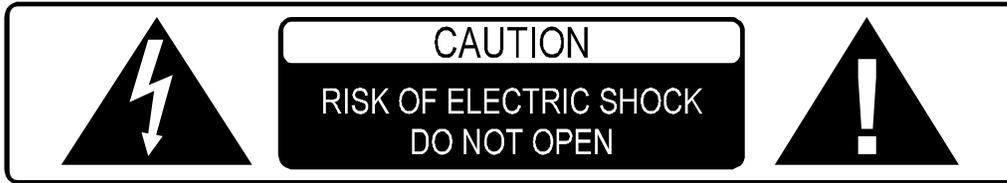

This symbol of a lightning flash inside a triangle is intended to alert the user to the presence of uninsulated “dangerous voltages” within the player’s enclosure that may be of a magnitude so as to constitute a risk of electrical shock.



This symbol of an exclamation point inside a triangle is intended to alert the user to the presence of important operating and safety information in the documents accompanying the player.

- ❖ Do not use the player around water or in high-moisture environments such as a bathroom after a shower; never immerse the player or splash water on it. If player gets wet, discontinue use immediately.
- ❖ Clean with a dry cloth or cloth dampened with mild detergent cleaning solution. Do not apply cleaning solutions directly to player. Do not use abrasive cleaners, bleach or flammable solvents. Remove the player from AC power prior to cleaning.
- ❖ A loose power cord may create a tripping hazard. Tuck unused portions of the power cord into the back of the player. Store the cord in the cord storage area to avoid tripping on it during transport.
- ❖ To avoid injury caused by a falling player, always place it on a stable, horizontal, flat, dry surface and keep the non-skid feet clean.
- ❖ There are no user-serviceable parts in the player.
- ❖ To avoid high heat build-up, never cover the player with a blanket.

- ❖ If the keypad is damaged (such as a torn button), do not use the player. Do not insert anything into the holes or receptacles. Request a replacement player and return the damaged player for service.
- ❖ The battery pack, part number 040-13109XX (7.2V, 2000mAh, 0.5C charge) is manufactured by GP (Gold Peak) Group. It cannot be replaced by patrons. If the player does not play on batteries after being charged, you may request a replacement player and return this player for service.
- ❖ When packaging a player for return, tape the carton closed to prevent it from opening in transit.

Federal Communications Commission (FCC) Statement

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This apparatus can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your library for help.

Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interferences, and (2) this device must accept any interference received, including interference that may cause undesired operation.

040-1463900