

Getting Started:

1. Launch ViewScan Premium, select mode, pull handle, load film



Select the mode that you would like to use during this session.

- **Simple Mode**
View and capture images - similar to familiar reader/printer
- **Standard Mode**
View and capture with easy to use editing tools and additional output options
- **Advanced Mode**
Powerful advanced view, capture, edit, image enhancement, research tools and output options

Pull Handle Forward To:

- Raise Glass and Load Film
- Enable High Speed Rewind



2. Use physical or on-screen buttons to advance film



3. Use tools at top to adjust

Use these controls to set brightness level, rotation, focus, invert positive and negative and more. Roll mouse over icon for more detailed information.

HINT: SETTINGS
There could be previously saved settings you can **LOAD**. You can also save settings so you do not have to make adjustments for a certain film each time it is used.

HOW IT WORKS:
Click this icon on any screen of the ST Premium Software to play a short video to describe how the feature works.

Capturing a Full Page or Cropping Part of a Page:

4. Instant Print or crop, scan, save or print

Print or scan the full page from the Browse tab:

To Print the page, which may include black borders, click the Green Instant Print Button in the top left corner.

To Scan the full page, select the Capture Full Frame button in the bottom left corner.


Crop the image to select only the information you need:

Scissor Cut™ Cropping:
Select the Cropping Tab from the top. Simply click and drag around any area you would like to include in your image. Click Capture Cropped Image to scan the area that you have selected. You may also subtract and clear your selection.

ST Premium Software Quick Start Guide

Advanced Editing Options:


Captured Image Review

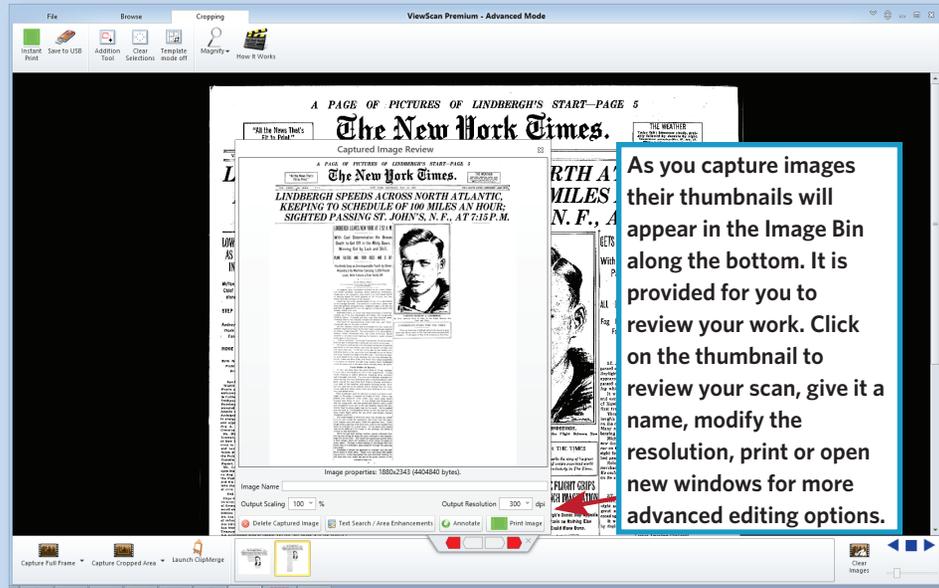

Saving, Sharing and Printing Options


Select the File Tab to choose how to save, share or print

Select how you want to save or print your scans

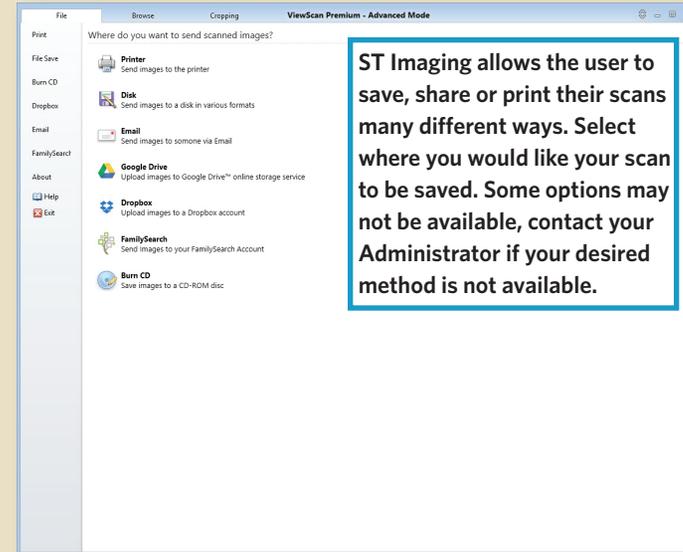

Target Area Enhancement

Target Area Enhancement allows you to enhance an area of the scan only within a defined area. To begin, select the scan from the Image Bin and select the button, Target Area Enhancement.

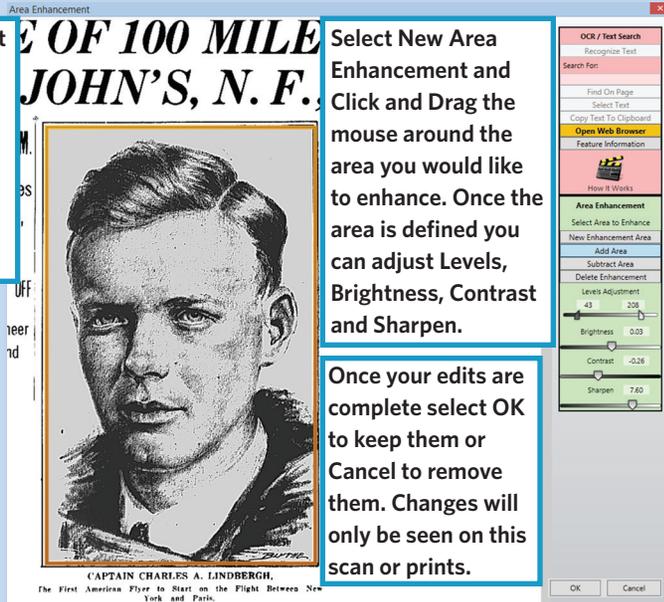

Choose where and what file type you would like to save your scan as

